

Installation Guide





Acustone Panel Installation

Righto, if you're ready to give your space a sleek new look and feel with Acustone panels, here's how to get the job done smoothly, mate.

What You'll Need

Before you get stuck in, make sure you've got all the right gear handy:

Tape measure

- a good quality one, she'll be right



Pencil or marker

- something easy to see



Matt black screws

- 30-32mm for a top job



Drill or screwdriver

- powered one will save ya some elbow grease





Fine toothed handsaw

- for cutting across the stone. take it easy



Sharp utility knife

- for slicing the felt backing like a pro



Safety glasses

- critically important, no one wants dust or bits in their peepers



Face mask

- especially when cutting stone, keep those lungs happy


Step 1: Prep the Wall

First things first, give your wall a good once-over and a clean. Get rid of any old nails, screws, or dodgy paint flakes that might be lurking. You want the surface to be flat, dry, and solid as a rock. A little bit of prep now goes a long, long way!

Pro Tip:

Need any of these bits and bobs? No dramas – we've got all the recommended accessories in our online store. Easy as!



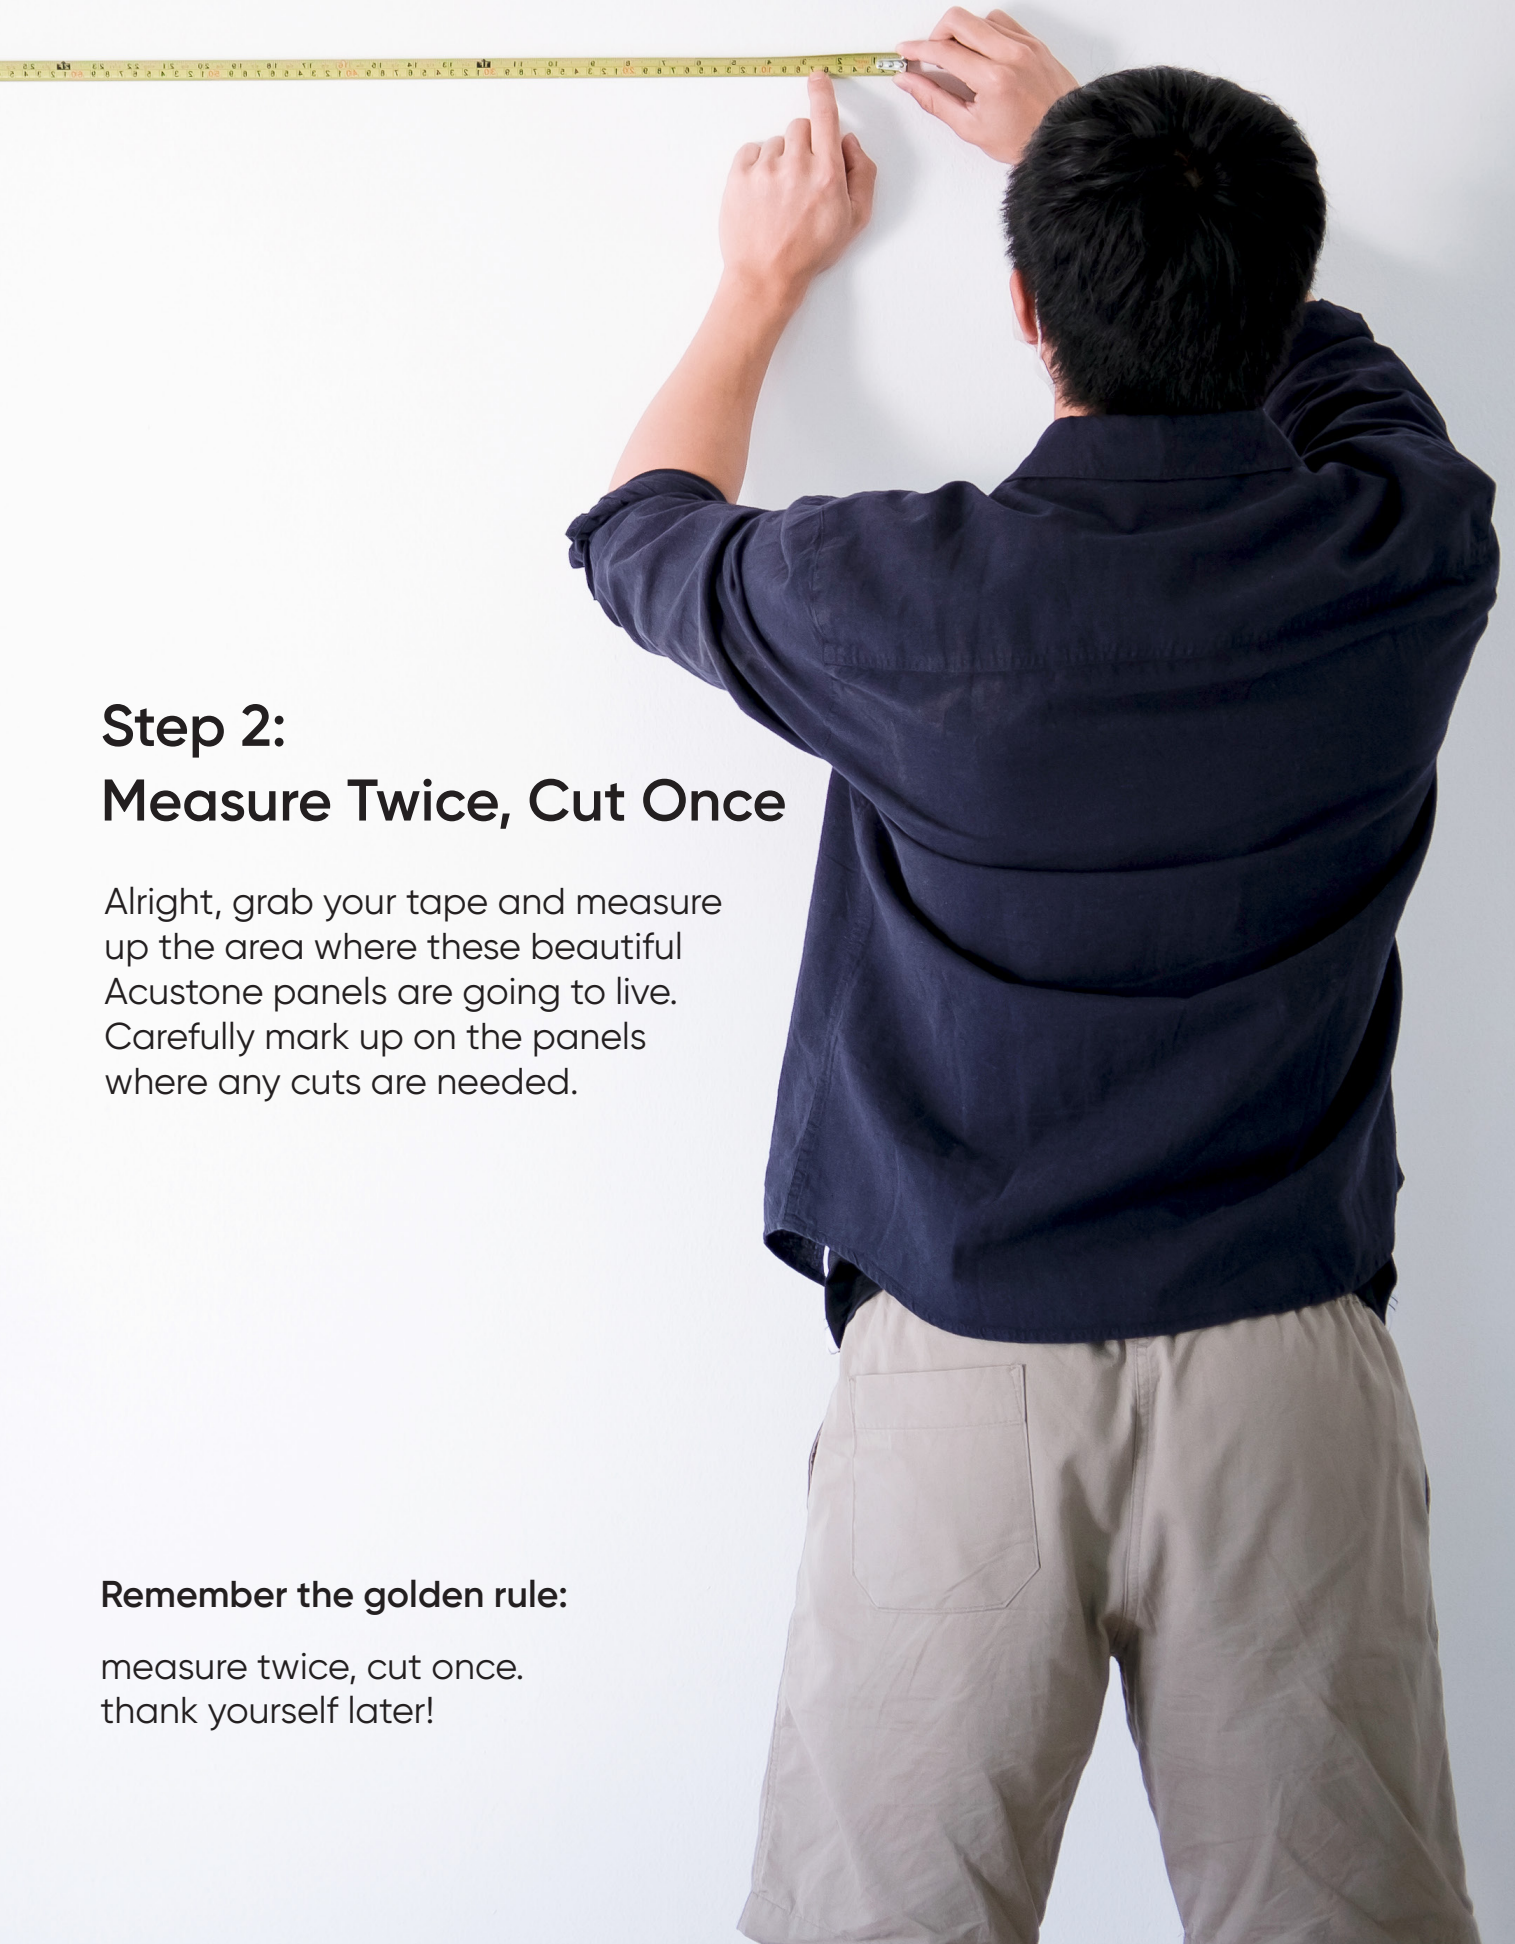

Step 2: Measure Twice, Cut Once

Alright, grab your tape and measure up the area where these beautiful Acustone panels are going to live. Carefully mark up on the panels where any cuts are needed.

Remember the golden rule:

measure twice, cut once.
thank yourself later!



Step 3: Cut the Panels (If Needed)

If your panels need a bit of a trim to fit perfectly:

Cutting across the panel (stone and felt):

Use a fine-toothed handsaw. Go steady for a clean, straight cut through both the stone veneer and the felt.

Cutting lengthwise (trimming the felt backing only):

A sharp utility knife will do the trick here. Score it and it should separate nicely.

Safety First, Mate:

Working around power points or light switches? Be extra careful. Use a jigsaw for neat cutouts and always, ALWAYS make sure the power is switched off at the mains before you go near any electrical fittings. Better safe than sorry!

Step 4: Fix the Panels to the Wall

You've got a couple of solid options here to get these panels up. Choose whichever suits your wall type and your preference:

Option 1: Screws (The Classic)

Use your 30–32mm matt black screws. Drive them straight through the acoustic felt backing and securely into the wall. Easy does it.

Aim for about 12–15 screws per panel, spread out evenly. This will keep things nice and snug, no worries.

If your wall's brick or concrete, it's a good idea to chuck in some wall plugs first for that extra bit of grip and hold.





Option 2: Adhesive (The Clean Fix)

Not keen on drilling holes? No problem. A quality construction adhesive is your friend. Apply it in generous, wavy lines or big zig-zags along the back of the felt. Then, press the panel firmly and evenly against the wall. Hold it for a moment to let it bond.



Step 5: Final Touches & Inspection

Once all the panels are up on the wall, take a step back and have a good look. Check the alignment and make sure everything's looking schmick. Tighten up any loose edges if you spot 'em. Give the surface a light dust-off with a soft, dry cloth. No need for any polish or fancy cleaners – the natural stone finish speaks for itself.



Step 6: Crack a Cold One & Admire

You've done it! The hard yakka is over. Time to crack a cold one, sit back, and admire your handiwork. Your space now not only looks a million bucks with that distinct Acustone style but will also benefit from improved acoustics. It's not just stylish – it genuinely helps tone down the echo and noise. Good on ya!

For more inspiration, tips,
and to check out our full
range of stunning natural
stone products, visit our
website.

Acustone Panels by
Acme Trendz Australia's
Choice for Natural Stone
Veneer and Acoustic
Solutions. Transforming
Spaces, Beautifully.

 07 3102 3344

 acustone.com.au

 info@acustone.com.au

